 


How to enter a waypoint using a Garmin GPSmap 60 GPS Unit

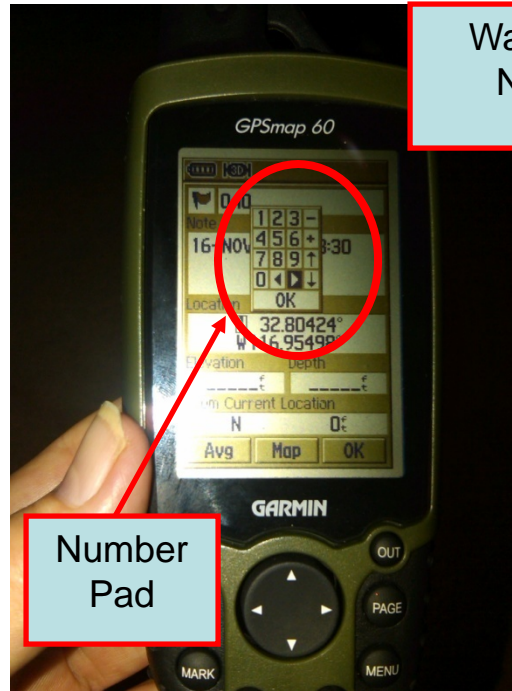

1. Turn GPS Unit on, hold on/off button in until display activates.

2. Wait until 'acquiring satellites' notice goes away and the screen shows at least 4 satellite fixes (bars and circles as above)

3. Select the Mark Button. You have just marked a waypoint and you need to change it to the next coordinates.

4. Use the up and down arrows to highlight the location waypoint.


5. Select the Enter Button (Entr on the front of the unit).

6. A number pad screen pops up. Use this pad and the up and down arrows in the circle to enter your waypoint. Select OK in the pop up screen, then select the Enter Button.


7. Use the up and down arrows to highlight the waypoint name. Select the Enter button and name your waypoint.

8. Select OK in the name window and select OK again in lower right corner of the screen


How to navigate to a waypoint using a Garmin GPSmap 60 GPS Unit

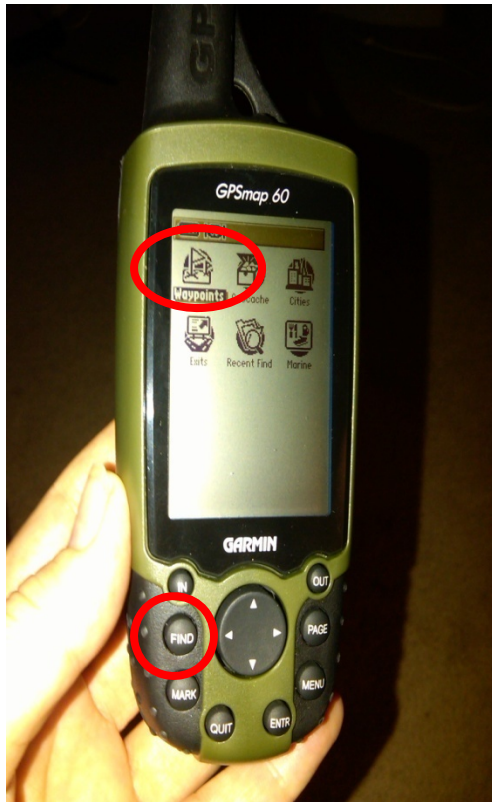

9. Select the Find button.
10. Select the Waypoints icon. Select the Enter button.
11. Find the waypoint you named in Step 7. Select the Enter button.

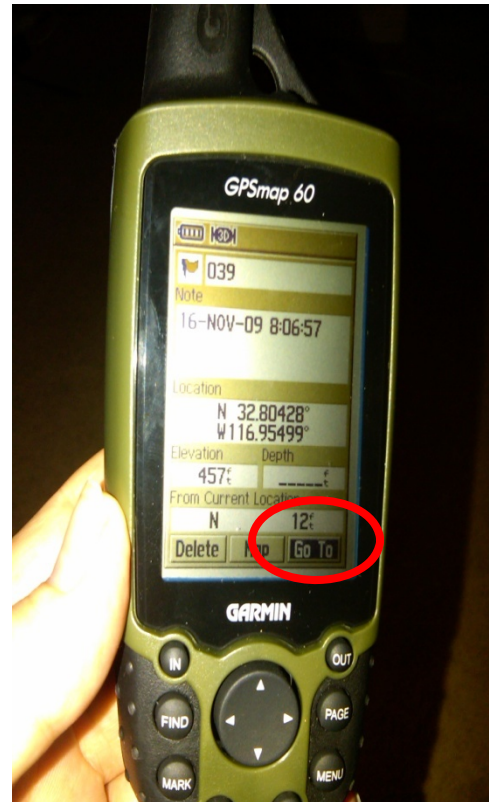

 12. Highlight the 'Go To' button in the lower right corner
13. Select the Page button until the screen with the compass and arrow appears.

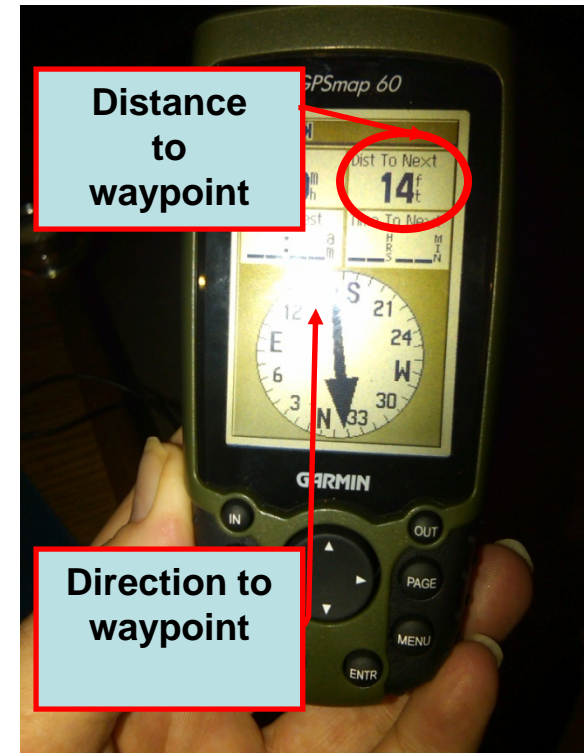

14. Follow the arrow and check that the 'Dist To Next' is getting smaller.
15. The unit will beep and flash 'Arriving at Destination' when you are close to the waypoint.